

vtech®

# Instruction Manual

 
## Zoo Jamz® Giraffe Piano



# INTRODUCTION

Thank you for purchasing **Zoo Jamz® Giraffe Piano**.

Choose an instrument and join the band. Sing along with the giraffe, or play music and create your own songs!

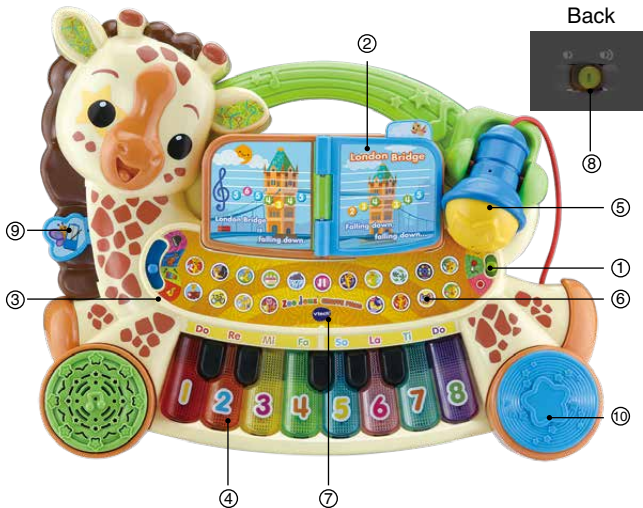

- |                         |                    |
|-------------------------|--------------------|
| ① On/Off Mode Selector  | ⑥ 18 Music Buttons |
| ② Music Book            | ⑦ Pause Button     |
| ③ Instrument Selector   | ⑧ Volume Switch    |
| ④ 8 Light-Up Piano Keys | ⑨ Tempo Selector   |
| ⑤ Microphone            | ⑩ Scratch Dish     |

# INCLUDED IN THE PACKAGE

- One VTech® Zoo Jamz® Giraffe Piano
- Quick Start Guide

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE:

Please save this Instruction Manual as it contains important information.


## ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

### Unlock the packaging locks:

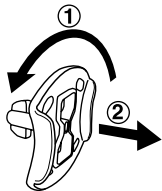


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

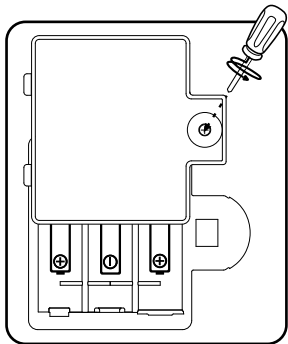

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Exit Try-Me Mode

Attention: The unit is in Try-Me mode when it is first out of box. Slide the Volume switch to the Low volume to exit the Try-Me mode, and then slide the Mode Selector to the mode 1 to turn on the unit in normal mode.



# PRODUCT FEATURES

## 1. Tempo Selector

Adjust the tempo when you play a melody.

- ▲ Up: Fast
- Center: Standard
- ▼ Down: Slow



## 2. Instrument Selector

Choose between Piano 🎹, Violin 🎻, Xylophone 🎸 or Saxophone 🎷 sounds as you play and listen to music.



## 3. Music Button

Press a **Music Button** to select a song. Choose mode 1 to hear the lyrics and mode 2 for melody only.



## 4. Pause Button

As the music plays, press the **Pause Button** to pause or start the music.



## 5. On/Off Mode Selector

Move the selector down to turn the unit **Off** or up to select a mode of play.



## 6. Microphone

Pick up the **Microphone** to turn it **On**. Return the **Microphone** to the stand to turn it off.



## 7. Scratch Disc

Spin the **Scratch Disc** to hear fun sound effects and jam with the music.



## 8. 8 Light-Up Piano Keys

Press any of the **8 Light-Up Piano Keys** to play along!



## 9. Music Book

Turn the page, and the unit will recognize the page and play the corresponding music.



## 10. Volume Switch

Move the **Switch** to select high or low volume.



## 11. Automatic Shut-Off

To preserve battery life, the unit will automatically turn off after several minutes without input. The unit can be turned on again by slide the **On/Off Mode Selector**. The unit will also automatically turn off when the batteries are very low. A warning sound effect will be played as a reminder to change the batteries.





# ACTIVITIES

## Activity 1

### Music Time

Press a **Music Button** to choose a song. The song will play with the lyrics. Then, the song will play again without vocals so you can sing along!



## Activity 2

### Learning Mode

Press a **Music Button** to choose a melody. Watch and listen. After the melody plays, follow the **8 Light-Up Keys** to play the melody on your own.



# SING-ALONG SONG LYRICS

## Music Book Song 1

London Bridge is falling down,  
falling down,  
falling down.  
London Bridge is falling down,  
my fair lady.



## Music Book Song 2

Mary had a little lamb,  
little lamb, little lamb.

Mary had a little lamb.

Its fleece was white as snow.



## Music Button Sung Songs

### Song 1

Strong and tall,

Strong and tall.

Giraffes can reach so high.

They are strong and tall.

### Song 2

There was a giraffe who learned how to fly.

I don't know how she learned how to fly.

Her name was Sy.

There was a giraffe who played the piano.

Somehow he learned to play the piano.

His name was Art. I guess he's smart!

### Song 3

Bye, baby giraffe.

Daddy's gone a-running.

Gone to run a cross the plains,

He'll be back in the morning.

## Song 4



It's my birthday today.  
As a gift, I got some socks.  
they are so long,  
they go on and on.  
they stretch all around the block.

## Song 5



It's raining, it's pouring.  
Giraffes, they are all snoring.  
They don't like to sleep for long  
and can't wake in the morning.

## Song 6



Have you seen a giraffe dance?  
a giraffe dance, a giraffe dance?  
Have you seen a giraffe dance,  
dance into the evening?

## Song 7



Let's rock a-round the watering hole,  
the watering hole, the watering hole.  
Let's rock a-round the watering hole,  
jamming to the music.

## Song 8

High up in the tree tops,  
all covered with leaves.  
Giraffes were all snacking,  
when somebody sneezed.  
The leaves they all scattered,  
out into the air.  
and now lunch is ruined,  
It just isn't fair.

## Song 9

Oh, dear! Won't you come play with me?  
Oh, dear! Won't you come play with me?  
Oh, dear! Won't you come play with me?  
We will all go to the fair.

## Song 10

The giraffe looked over the trees.  
The giraffe looked over the trees.  
The giraffe looked over the trees,  
to find some tasty leaves.

## Song 11

The giraffe on the bus needs...a sunroof,  
a sunroof, a sunroof.  
The giraffe on the bus needs a sunroof,  
so they can poke their head out.

## Song 12



Sing-ing, strum-ming,  
I'll play a tune for you.  
Plink-ing and drumming,  
it's my favorite thing to do.

## Song 13



The animals come out to play.  
The sun it shines all through the day.  
They come to dance, they come to sing,  
and make music into the evening.

## Song 14



Three little kittens, they lost their mittens and they began to cry.  
Oh, mother dear, we sadly fear we have lost our mittens.  
What! Lost your mittens? You naughty kittens!  
Then you shall have no pie!

## Song 15



Here we go looby loo.  
Here we go looby lai.  
Here we go looby loo.  
All on a Saturday night.

## Song 16

We love to make music all the day.

We sing and we dance, we run and play.

We love to play songs, so come sing a-long.

Let's make music and sing a-long.

## Song 17

One, two - can't reach my shoe.

Three, four - can't touch the floor.

Five, six - can't pick up sticks.

Because I am so tall.

## Song 18

Skip skip, Skip to my lou.

Skip skip, Skip to my lou.

Skip skip, Skip to my lou.

Skip to my lou my darling.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

## **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

## **IMPORTANT NOTE:**

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**Supplier's Declaration of Conformity**  
**47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5603  
Product name: Zoo Jamz® Giraffe Piano  
Responsible Party: VTech Electronics North America, LLC  
Address: 1156 W. Shure Drive, Suite 200,  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.  
CAN ICES-003(B)/NMB-003(B)

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

