

vtech[®]

 
 
Instruction Manual

Sandy Snacks-a-Lot™



INTRODUCTION

Thank you for purchasing **Sandy Snacks-a-Lot™**. Pet, feed and interact with Sandy to hear her fun reactions to 8 different snack pieces. Watch her react to different snacks, flavors and sensations with fun phrases, songs, sound effects and color-changing lights.

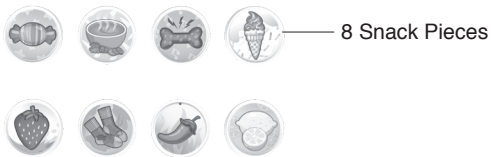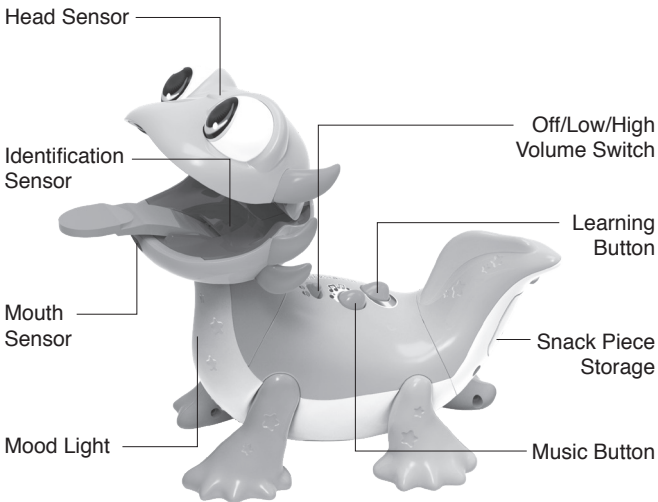

INCLUDED IN THE PACKAGE

- Sandy Snacks-a-Lot™
- 8 Snack Pieces
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

 
Il est conseillé de conserver ce guide de démarrage rapide car il comporte des informations importantes.

NOTE

Please cut and discard the cords before playing with the unit. The cords are not part of the product and should be discarded for your child's safety.



Unlock the packaging locks:

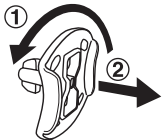

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out and discard the packaging locks.

ACTIVATING NORMAL PLAY MODE

 
The first time the **Sandy Snacks-a-Lot™** is used, you will need to exit **Try-Me** mode and activate **Normal Play** mode.

1. Slide the **Off/Low/High Volume Switch** to turn the unit **On**.
2. Except for the green pepper, feed Sandy other snack pieces. You will hear three beep sounds to indicate that the **Normal Play** mode is activated.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located at the bottom of Sandy and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 AA (AM-3/LR6) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

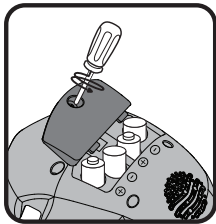

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

Slide the **Off/Low/High Volume Switch** to turn **ON** the unit and choose low or high volume.



2. Head Sensor

Touch Sandy's head as shown in the picture to hear different fun sounds.



3. Learning Button

Press the **Learning Button** to hear interactive phrases about colors and various snacks.



4. Music Button

Press the **Music Button** to hear Sandy sing fun songs.



5. Mouth Sensor

The **Mouth Sensor** is located on Sandy's chin directly under her mouth. Hold your hand or a snack piece in front of the sensor and Sandy will open her mouth.



6. 8 Snack Pieces

 
When Sandy's mouth opens, place a snack piece directly on her tongue to watch her react.

Note: Only feed Sandy the **8 Snack Pieces** provided with this toy (Do not insert other items into Sandy's mouth.)



7. Identification Sensor

The sensor will identify the **Snack Piece** once it is inside Sandy's mouth. She will react and tell you how she feels.

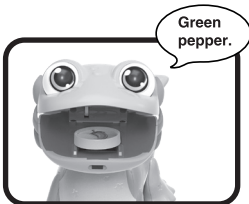


8. Snack Piece Storage

Open the storage door at the base of Sandy's tail and place the **SNACK PIECES** into the compartment.




9. How to open and close the storage door

 To open, pull the locking tab upward (the door will then fall open).

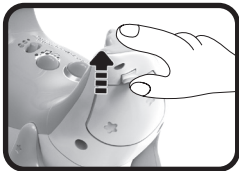

 To close, align the door in the slot and press firmly. You will hear a “click” sound to confirm the door is secure.

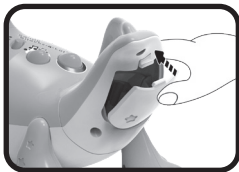

10. Mood Light

The **Mood Light** will change colors when Sandy is talking or singing. It will also reflect her mood when Sandy is eating.



11. Automatic Shut-Off

To preserve battery life, the **Sandy Snacks-a-Lot™** will shut **OFF** automatically after several minutes without input. The unit can be turned **ON** again by sliding the **Off/Low/High Volume Switch**. Sandy’s belly will flash in red three times and then automatically turn **OFF** when the batteries are very low.

Note:

1. Do not force Sandy’s mouth open or closed with your hands.
2. Do not grab Sandy’s tongue.
3. Do not put the toy under water.
4. Do not put fingers in Sandy’s mouth.

ACTIVITIES

1. Press the **Learning Button** to learn color facts or hear Sandy talk about snacks.
2. Press the **Music Button** to hear Sandy sing and to watch her light change colors.
3. Touch Sandy's head to comfort her and show her affection. When Sandy is singing, touch her head and you will hear fun sounds jammed in the song.
4. Choose from **8 Snack Pieces** to feed Sandy and watch her react. If she is full, she will hiccup. If you feed her too many snack pieces she doesn't like, watch out, she might fart!

SONG LYRICS

Song 1

My gills are really cool,
and people love my smiling face.
They help me breathe in water,
as I move from place to place.

Song 2

Sour and spicy,
cold and sweet.
So many things to try,
so many things to eat.

Song 3

I am a walking fish.
Axolotl is my name.
I swim or walk on land!
Would you like to play a game?

Song 4

I love food and I am hungry.
I am ready for a snack.
Bleah!
What is that you fed me?
You better take it back!

Song 5

Sleeping, playing, hiding,
I come out at night.
My home is in the rocks,
hiding from the light.

Song 6

I love all the colors in my yummy food.
Red strawberries, yellow lemons.
Pink ice cream is tasty too.

HUMMED MELODIES

1. Spring (*Lento Rendition*) - Vivaldi
2. Bingo
3. Alouette
4. The Entertainer - Scott Joplin

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be used for an extended period of time.
4. Do not drop the unit on hard surfaces or expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of new batteries.

IMPORTANT NOTE:

If the problem persists, please contact our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5601
Product Name: Sandy Snacks-a-Lot™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

