

vtech[®]

Instruction Manual

Dribble & Bounce Tiger™



INTRODUCTION

Thank you for purchasing the **VTech® Dribble & Bounce Tiger™!** Be on the winning team with the **Dribble & Bounce Tiger™!** Get warmed up as Tiger shows off impressive ball skills by dribbling and spinning the basketball. Then, play some defense and try to catch Tiger while moving around obstacles, getting little ones up and going. What a slam dunk!



Four Star
Buttons



On/Off /Mode
Switch

INCLUDED IN THE PACKAGE

- **Dribble & Bounce Tiger™**
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.


ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks:

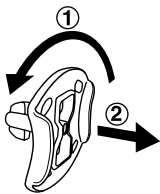


- ① Turn the packaging locks counterclockwise several times.
- ② Pull out and discard the packaging locks.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

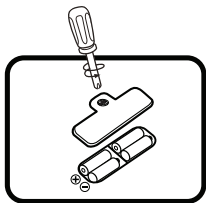

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. On/Off/Mode Switch

To turn the unit **On**, slide the **On/Off/Mode Switch** to the **Learn Mode** (🏀) or the **Game Mode** (🐯) position. You will hear a song, phrases and sounds. To turn the unit **Off**, slide the **On/Off/Mode Switch** to the **Off** (OFF) position.



2. Automatic Shut-Off

To preserve battery life, the **Dribble & Bounce Tiger™** will automatically power down after approximately 35 seconds without input. The unit can be turned **On** again by pressing a **Star Button** or by sliding the **On/Off/Mode Switch** to the **Learn Mode** or the **Game Mode** position.

NOTE

This product is in Try-Me mode. After opening the package, please turn **Dribble & Bounce Tiger™ Off** and **On** again to proceed with normal play.

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Star Buttons

Press the four **Star Buttons** to hear numbers, songs, phrases, melodies and sound effects. If Tiger is on the floor, he will spin will spin or bounce the basketball and move in response to the voices and sounds. The light will flash with the sounds.



2. Front and Back Sensors

Tiger is equipped with special sensors on the front and back of his shoes. Come near the sensors to activate them and see Tiger move by spinning or bouncing the basketball. Tiger will respond with playful phrases, music and sounds. The light will flash with the sounds.



NOTE

The infrared light sensors in the shoes are sensitive to sunlight. The sensors may not perform properly in brightly lit, sunny rooms or under direct sunlight.

3. Pick-Up Sensor

Tiger has a special sensor on the bottom of one of the wheels and knows when he has been picked up. Each time you pick him up, him will respond with a cute phrase and stop the motions. The light will flash with the sounds.



MELODIES

1. It's Game Time!
2. Dribble 'n Shoot
3. Bring Home the Ball
4. Here We Go Round the Mulberry Bush
5. London Bridge is Falling Down
6. Oh Where, Oh Where Has My Little Dog Gone?
7. One, Two, Buckle My Shoe
8. Bingo
9. Glow Worm
10. The Green Grass Grew All Around

SONG LYRICS

Song 1

Wig-wig-wig-wiggle, drib-drib-drib-dribble,
Who can make it possible? It's you.
Pick and roll, give and go,
Bounce, bounce, bounce, like a superhero.
Back to the court, play, play, play!
We win the game, hip hip hoo-ray!

Song 2

The basketball goes up and down,
up and down, up and down.

Nothing but net like swish, swash, swoosh,
swish, swash, swoosh, oh yeah!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. For best performance, we recommend that you use new batteries. Otherwise the unit may move slowly.
6. We recommend that you avoid playing with the unit in bright sunlight or outdoors. Bright light will negatively affect the sensors.
7. We recommend that you play with this unit in open spaces that are free of obstacles to prevent the toy from running into objects.
8. For the best performance, we do not recommend playing with the unit on thick carpet or rugs. Solid, smooth surfaces are best.
9. If you receive an abnormal response or no response at all from the unit, please turn the unit **Off**, replace the batteries and then turn the unit **On** again.
10. We recommend always playing with this toy on clean surfaces. Dirt on the wheels could cause damage to the unit.
11. If the unit starts moving slowly, this is a sign that the batteries are low on power. We recommend replacing the batteries with an entire set of new batteries.
12. Do not roll the unit on your child's clothing, body or hair while the toy is turned on. If something gets caught in the wheels while the unit is turned **On**, slide the **Mode Selector Switch** to the **Off** position.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5724
Product Name: Dribble & Bounce Tiger™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

