

vtech®

Instruction Manual

Go!Go! Smart Wheels®

Speedy Repair Shop™



INTRODUCTION

Thank you for purchasing the VTech® Go! Go! Smart Wheels® Speedy Repair Shop™.

Lift, fix and learn with this state-of-the-art garage, including a repair base with a movable mechanical arm controlled with an easy-to-use joystick. Move around the play set to interact with a spinning tire roller and a role-play car wash. 3 SmartPoint™ locations add to the fun as they trigger context-specific phrases when driven over.



INCLUDED IN THE PACKAGE



One **SmartPoint™**
car



One repair base



One 2nd story track A



One 2nd story track B




One track support A



One track support B




One ramp track

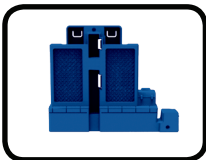

One elevator wall




One elevator platform

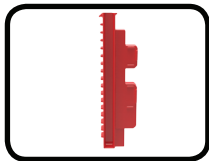

One elevator track




One sign board

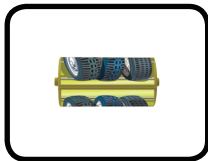

One tire roller




One store plate

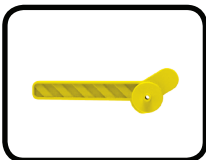

One gate



One car wash entry

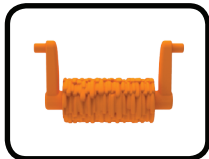

One car wash roller



One Quick Start Guide



One label sheet

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.


NOTE

Il est conseillé de sauvegarder ce manuel car il comporte des informations importantes.

If there are no locks inside the package, disregard this message.

Removing the Packaging Locks:

- ① Turn the packaging locks anticlockwise several times.
- ② Pull out the packaging locks and discard.

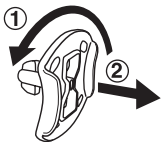

INSTRUCTIONS



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.




ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation – Car

1. Make sure the unit is turned OFF.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

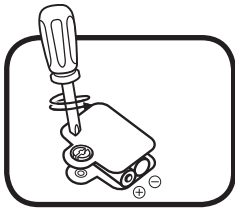

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.


 
RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

LABEL APPLICATION

Please stick the labels to the play set securely as indicated on the following page:



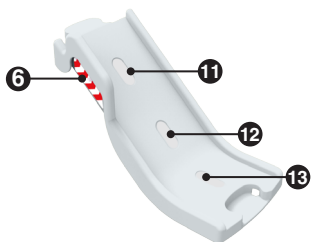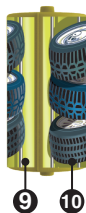

ASSEMBLY INSTRUCTIONS

With the VTech® Go! Go! Smart Wheels® Speedy Repair Shop™, safety comes first. To ensure your child's safety, adult assembly is required.


1. Follow steps A through C below to assemble the 2nd story track and attach it to the track supports and repair base :
 - A. Attach 2nd story track A to 2nd story track B. A clicking sound will confirm they are firmly connected.



- B. Flip the 2nd story track assembly upside down and insert the elevator wall, track support A and track support B into the slots on the 2nd story track until they make a clicking sound.



C. Attach the repair base to the 2nd story track assembly by inserting the repair base wall into the slots on the 2nd story track. Then insert one end of the elevator wall into the slot on the repair base. A clicking sound will confirm they are firmly connected.

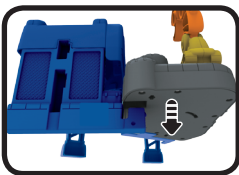

2. Assemble the elevator by attaching the elevator track into the slots on the elevator wall, and then slide the elevator platform down the elevator track.




3. Insert the sign board, tire roller, display plate, gate and ramp track into the slots on the 2nd story track.





4. Insert the car wash roller onto the car wash entry, and connect the car wash entry assembly to the bottom of the ramp track.

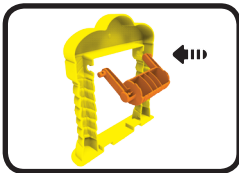

Once you've completed the above steps, you are ready to play! You can also connect the **Speedy Repair Shop** play set to other **Go! Go! Smart Wheels®** play sets (each sold separately).




PRODUCT FEATURES

Sports Car

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** (⏻) position.
To turn the unit **Off**, slide the **On/Off Switch** to the **Off** (●) position.

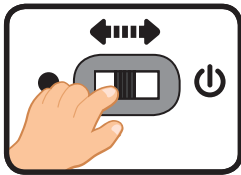

2. Automatic Shut-Off

To preserve battery life, the Sports Car will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing the light - up button, pushing the Sports Car quickly or triggering a SmartPoint™ location.

ACTIVITIES

Sports Car

1. Press the Light - Up Button to hear fun phrases, songs, sounds and melodies. While a melody is playing, continue pushing the Sports Car to add fun sounds on top of the melody. The light will flash with the sounds.



2. Push the Sports Car to hear fun sounds and phrases. The light will flash with the sounds.



3. Place the Sports Car on one of the play set's three SmartPoint™ locations to see the vehicle's light flash and to hear fun sounds, short tunes and phrases. The vehicle also interacts with other Go! Go! Smart Wheels® play sets (each play set sold separately).



ACTIVITIES

Repair Shop

1. Place the Sports Car or any SmartPoint™ vehicle (each sold separately) on any of the play set's three SmartPoint™ locations to hear fun sounds, music and phrases.



2. Place the Sports Car on the lift board SmartPoint™ to hear fun sounds and phrases. Lift the elevator to the top and release the vehicle to run down the track.



3. Block the Sports Car with the gate, then lift up the gate to let the vehicle run down through the car wash.



4. Place the Sports Car on the repair base, push and pull the joystick to move the vehicle and mechanical arm up and down. Move the joystick left and right to move the repair base and mechanical arm right and left. You will hear responses with fun sounds and phrases.



MELODY LIST

1. Here We Go 'Round the Mulberry Bush
2. Glow Worm
3. Itsy, Bitsy Spider
4. Funiculi, Funicula
5. For He's a Jolly Good Fellow
6. Did You Ever See a Lassie?

SONG LIST

Gonna Be in First

Zoomin' on down the race track
Gonna be in first, I swear.
Tell everyone who raced with all their heart
That they deserve a cheer!

Driving Fast, Driving Far

Driving fast or driving far,
Doesn't matter where you are,
Get your check ups right on time
And you'll keep moving, feeling fine.

Go! Go! Smart Wheels

I'm a Go! Go! Smart Wheels Race Car.
Ready to race at my best. (Go! Go!)
Speedy and swift and sparkly.
Let's Go! Go! And see (Go! Go!)

The Best Part of Being Kind

The best part of being kind
is it fills your heart up...and mine!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

IMPORTANT NOTE:

If the problem persists, please contact our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5832
Product Name: Speedy Repair Shop™
Responsible Party: VTech Electronics North America, L.L.C
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES(B)/NMB(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

